 




# Cashmaster Omega 230

## Quick Start Guide

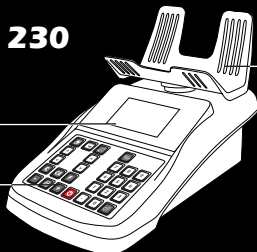

TRAY

### Keypad Layout

**NON CASH** - Use for manual entry of non cash items such as Maestro, Visa

 
**STRAPPED BILLS** - Press to select strapped bills

**UP and DOWN** - Used to select required bill/coin denominations

**C(CLEAR)** - Press and hold press again to clear the total

**PLUS and MINUS** - Used to add and subtract amounts to/from the total

**PRINT** - Press once for a print out of the totals

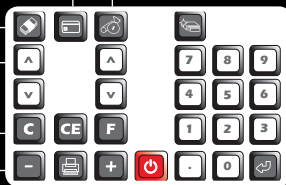

**ROLLED COINS** - Press to select rolled/loose coins

**TILL** - Press to save the current till and start a new one

**NUMBERS** - Use these for completing manual entries

**CE (CLEAR ENTRY)** - Press once to clear sub totals

**FUNCTION** - Used to control access various functions


**ENTER** - Use this for completing manual entries

**DECIMAL** - Only supported in calculator mode

**ON/OFF** - Press to switch machine on/off.

### Screen Layout

 Auto Scroll  
Battery in use  
Denomination  
Coins / Bills  
Selected currency  
Total / bank indicator

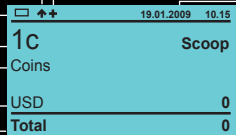

Auto Add  
Date  
Time  
Scoop / No. of pieces  
Sub total  
Running total

### Fast Key Functions

**Auto add**  
Press and hold the 'F' key and press the 'PLUS (+)' key. This will toggle Auto Add state. "+" will be displayed on the screen when Auto Add is on.

**Bank On/Off**  
Press and hold down the 'F' key and press the "Coin UP" key. This will allow your bank to be activated or deactivated.

**Calibrate Scoop**  
Press and hold down the "F" key and press the 'ON/OFF' key and follow the onscreen instructions.

**Calculator mode**  
Press and hold the "F" key and press the 'Enter' key. This will activate calculator mode. Use this function for adding/subtracting/multiplying/dividing.

**Set time/date**  
Press and hold the 'F' key and press the 'Coin DOWN' key. This will enter the Time/Date setting. Use the coin up/down keys to toggle and use the "PLUS (+)" and "MINUS (-)" keys to increase and decrease.

**Auto Scroll**  
Press and hold the "F" key and press the "MINUS (-)" key. This will toggle AutoScroll state. "▲" will be displayed on the screen when AutoScroll is on.

**Bank Setting**  
Press and hold down the 'F' key and press the "Bill UP" key. This will allow you to set the bank amount.

**Grams mode**  
Press both the "Rolled Coins" and "Strapped Bills" key simultaneously. Use this function to weigh objects (max 1.5kg).

**View Till**  
Press and hold the "F" key and press the "Till" key. This will display information for the current till.

**Contrast**  
Press and hold the "F" key and use the "up" (to increase) and "down" (to decrease) the contrast.

### Getting Started

1. Place the Cashmaster on a firm even surface, ensure the tray is empty, press ON/OFF.
2. Using the keypad:
  - Enter (1) Register, (2) Pulls, or (3) Count
  - Enter Register number (If prompted to do so)(Follow on-screen prompts)

## Loose Coins



Ensure that the display indicates coin counting mode.

Press the coin key to select coin counting mode and required the denomination.

1. Place all coins of your selected denomination in the scoop and onto the tray.
- 2a. If auto-add is on, remove the scoop from the tray, *and advance to the next denomination.*  
2b. If auto-add is off, press the key to add to total, *and advance to the next denomination.*

## Rolled Coins



Press to select Rolled coin mode

Ensure that the display indicates Rolled Coins counting mode.

Press the Rolled Coins key to select Rolled Coins counting mode.

1. Place a roll of coins on the tray.  
  
2a. If the roll is "full" the Cashmaster will display the value. *Go to step 3.*  
2b. If there is "crossover" or the roll is not "full". You must then select the denomination of coin using the coin . Press the enter key to confirm. *Go to step 3.*  
  
2c. If the roll is not "full" you must select the denomination using the coin keys. Press the enter key to confirm. *Go to step 3.*  
  
3a. If auto-add is on and the roll is "full" the cashmaster will automatically add to total.  
3b. If auto-add is on, and the roll is not full, press key to accept and add total.  
3c. If auto-add is off, press the key to accept the value and add the grand total.  
*Advance to the next denomination.*

## Loose Bills



Ensure that the display indicates bill counting mode.

Press the bill key to select bill counting mode and required the denomination.

1. Place bills of the selected denomination on the tray (up to 30 at one time). Repeat until all bills in denomination are on the tray.  
  
2a. If auto-add is on, remove bills from the tray, *and advance to the next denomination.*  
2b. If auto-add is off, press key to add to total, *and advance to the next denomination.*

## Strapped Bills



Press to select Strapped bill mode

Ensure that the display indicates strapped bill mode.

Press the strapped bill key to select strapped bill counting mode and to select bundles/clips.

1. Use bill key to select the required denomination, place the strapped bills on the tray.  
*If the strapped bills are "good" then the value is displayed.*  
  
2a. If auto-add is on and the strapped bills are "good" the value will automatically add to total.  
2b. If auto-add is off and the strapped bills are "good", press key to accept and add to totals.  
2c. If the strapped bills appears as "suspect", open the strapped bills and count in loose bill mode.  
*Advance to the next denomination.*

## Non Cash Items



Press to select non cash items mode

Ensure that the display indicates non cash mode mode.

Press the non cash key to select non cash and the item required.

1. Use the numeric keypad to enter the values.
2. If the value is correct, press the key to add to totals.  
*Advance to the next denomination.*