

Keys:	On/Off	Up Arrow	Cash Types:	Loose Coins	Functions:	Auto Scroll
	Plus	Down Arrow		Bills		Auto Add
	Cash Type	Function		Rolled Coins		Indicator

Getting Started

- Place the Sigma 100 on a firm, even surface, away from draughts and vibrations.
- Insert the HOD, pushing the connection firmly into place.
- Plug the adaptor into the back of the Sigma 100 and turn on the mains power supply.
- Turn on the Sigma 100 using the On/Off key (please ensure that the coin scoop is not placed on the cash counting machine prior to switching on).
- Leave your Sigma 100 plugged into the mains for at least 12 hours to charge the battery. The machine can still be operated during this time.

denomination and number of pieces		cash value of applied denomination
current cash type indicator		grand total

Loose Coins

Counting Coins

Rolled Coins

Press the Cash Type key until the indicator points to "Loose Coins".



Press the Cash Type key until the indicator points to "Rolled Coins".

You can select the denomination you require with the Up or Down Arrow keys.

Place a roll of coins onto the basket.

Place a scoop full of coins onto the hod.

The display will show the value, eg:

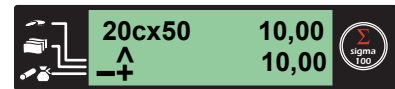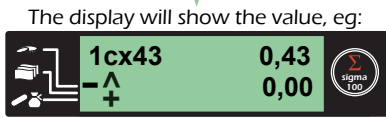

The display will show the value, eg:

Remove the Scoop and the value will automatically be added to the grand total:

Remove the roll and the value will automatically be added to the grand total:



(Note: If Auto Add is off, you will need to add the value by pressing the Plus key.)

(Note: If Manual Coin is on, you will need to select the denomination first. If Auto Add is off, you will need to add the value by pressing the Plus key.)


Counting Loose Bills

Press the Cash Type key until the indicator points to "Notes".


You can select the denomination you require with the Up or Down Arrow keys.

Place slices of notes onto the basket.

The display will show the value, eg:

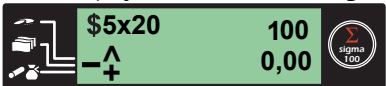



Remove the bills and the value will automatically be added to the grand total, eg:

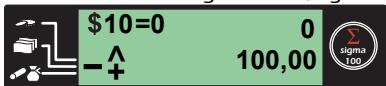

(Note: If Auto Add/Scroll is off, you will need to add the value by pressing the Plus key.)

Inserting the Battery

- Open the battery compartment on the base of the Sigma 100 (see Fig.1)
- Place the battery unit into the compartment ensuring that the metal contacts on the inside wall of the battery compartment are touching the exposed side of the battery unit. (see Fig.2)

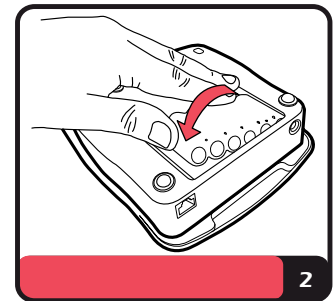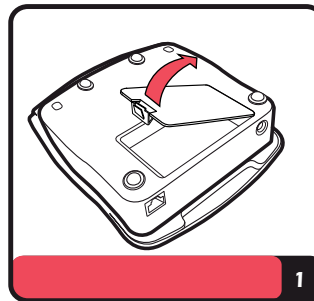

- Replace the battery cover and turn on the Sigma 100.

NB - IT IS ESSENTIAL THAT THE BATTERY IS INSERTED CORRECTLY PRIOR TO TURNING THE SIGMA 100 ON.

- To delete a sub total, select the desired denomination, then hold down the "Plus" key until the value returns to zero.
- To delete the grand total, hold down the "Plus" key until the display shows "Press the '+' key again to confirm". Pressing the "Plus" key again will clear the grand total. Pressing any other key will abort.
- To print your count information, press the Function key and Plus key together. (CP3 printer must be attached).
- If Multi Currency is available, switch currencies by pressing the Up and Down arrows simultaneously until the desired currency is displayed.
- Hold down the "On/Off" button for 2-3 seconds to turn off.
- To turn the Float option ON/OFF, hold down the Function key and press the UP Arrow key
- To select between CUP or SCOOP, hold down the Function key and press the DOWN Arrow key